



PL **INEBA**
instrukcja montażu i eksploatacji

CS **INEBA**
návod na montáž a údržbu

DE **INEBA**
montage-und betriebsanleitung

EN **INEBA**
instructions for assembly and use

ET **INEBA**
paigaldus- ja kasutjuhend

HU **INEBA**
szerelési és üzemeltetési utasítás

LT **INEBA**
montavimo ir eksploataavimo instrukcija

LV **INEBA**
montāžas un ekspluatācijas instrukcija

 
RO **INEBA**
instrucțiuni de montaj și operare

RU **INEBA**
инструкция по монтажу и эксплуатации


SK **INEBA**
návod na montáž a údržbu


UK **INEBA**
інструкція по монтажу і експлуатації

A

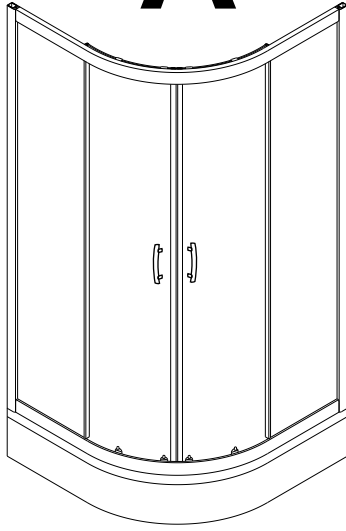


B

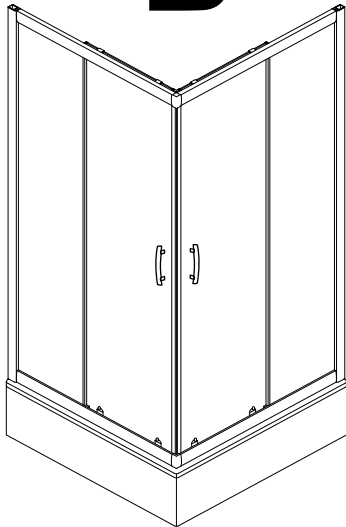 

 






	1	2	3	4	5	6	7	8	9	10
A	4	4	8	16	4	4	---	2	6	6
B	4	4	8	16	4	4	2	2	10	10

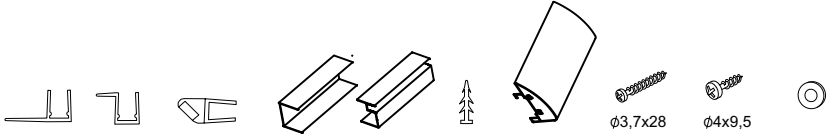 


	11	12	13	14	15	16	17	17.1	18	19	20
A	2	2	2	2	2	2	2	---	14	18	6
B	2	2	2	2	2	2	2	2	14	22	6




	21
A	6
B	6

  
 
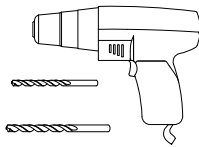 
 


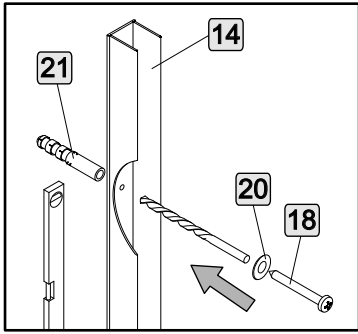 






A B

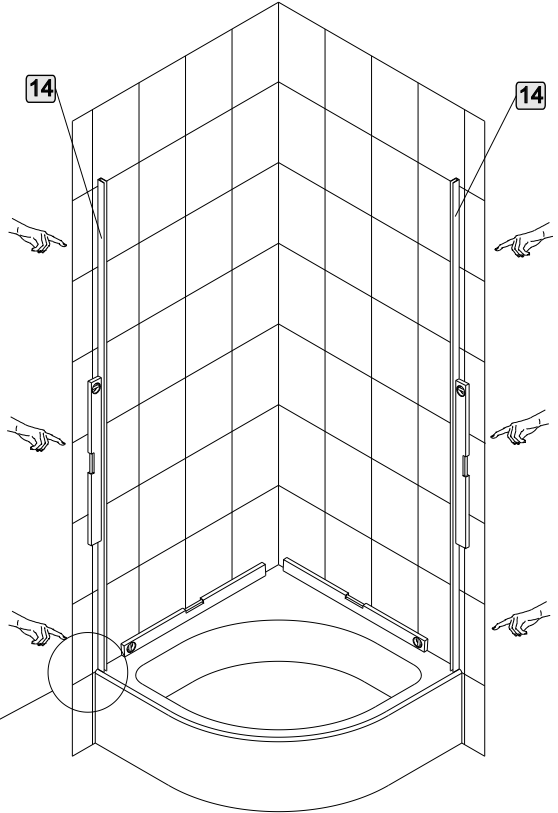 


5-10 mm

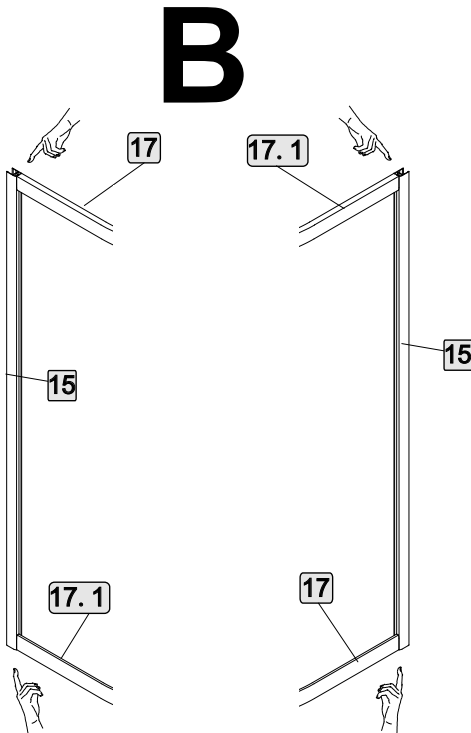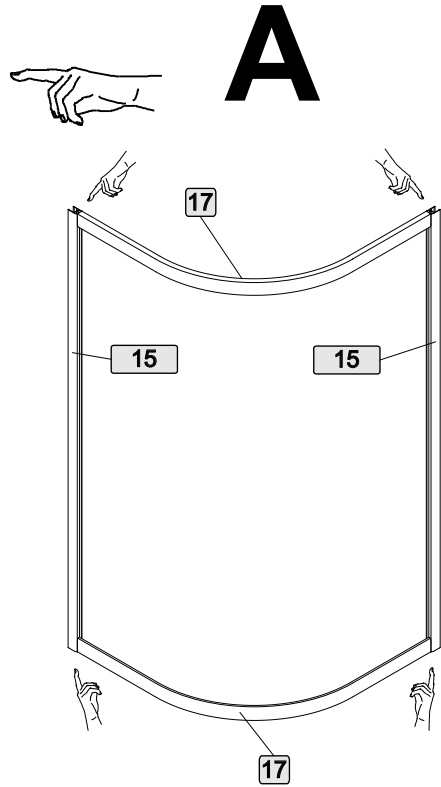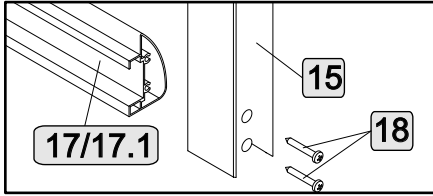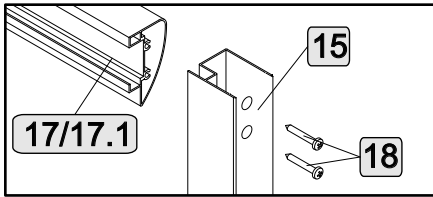    


A B

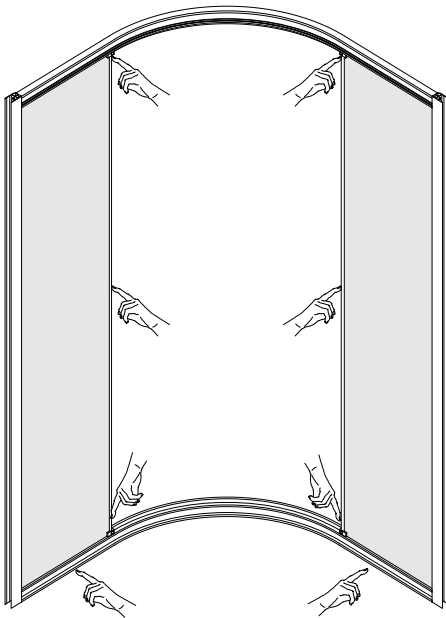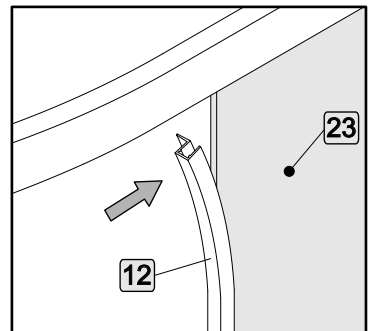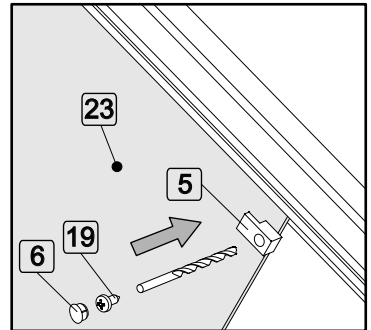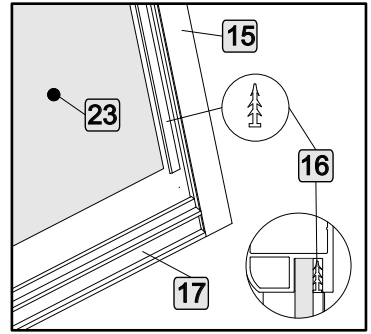     


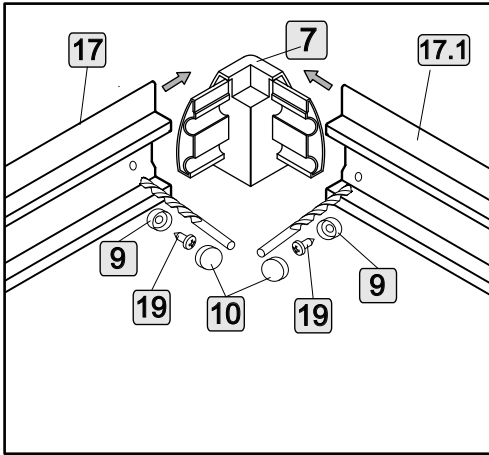 


B

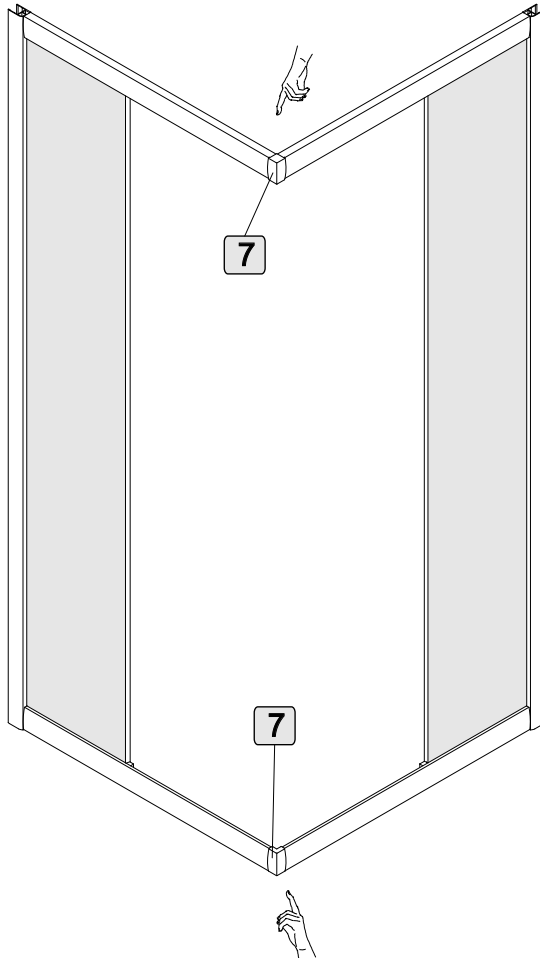 


A

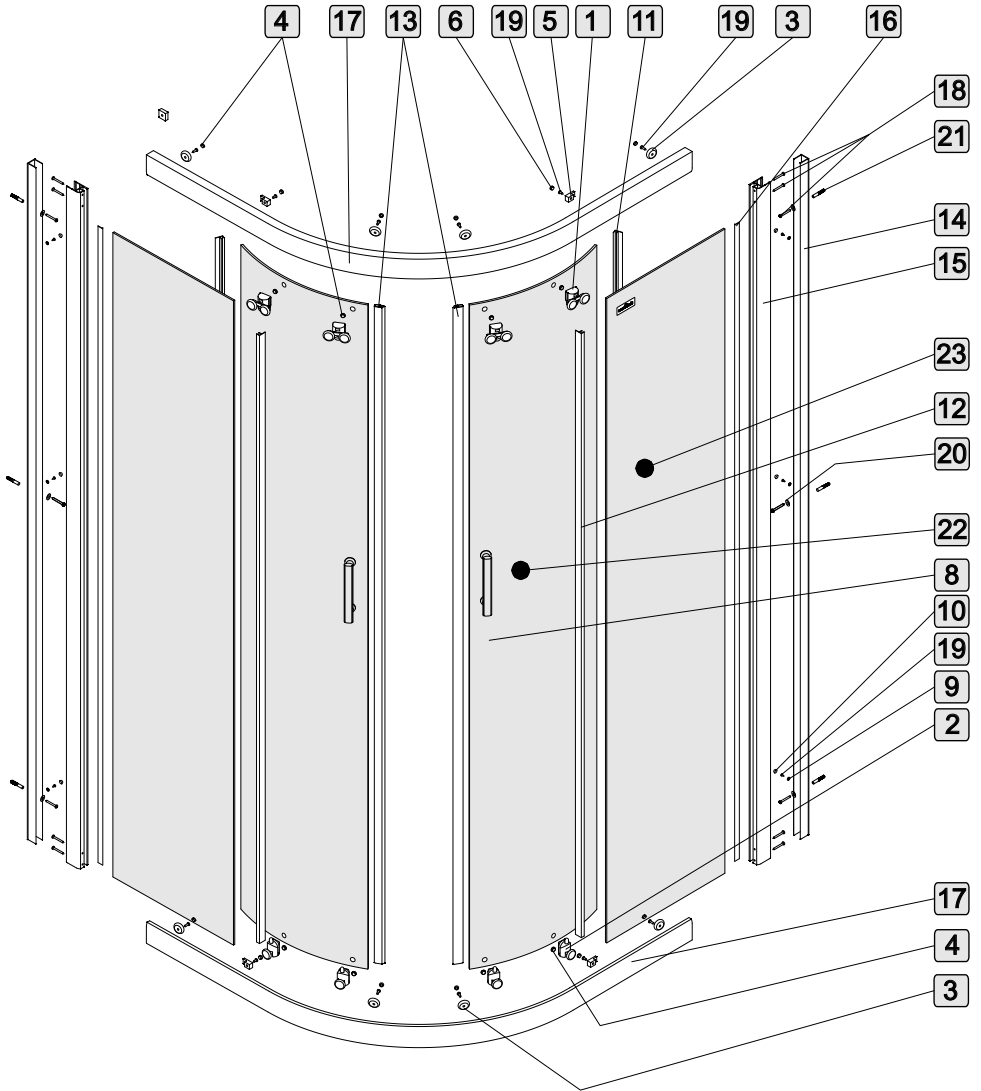 







B

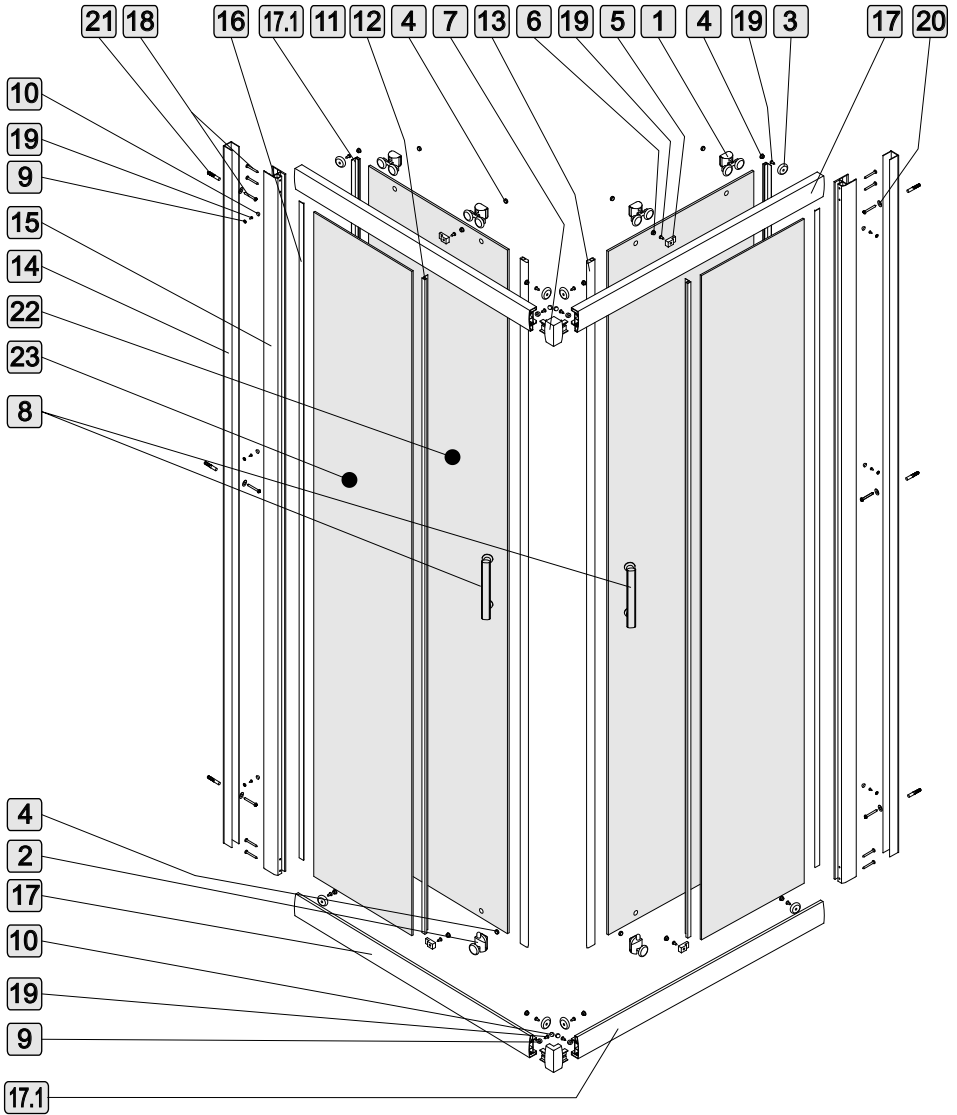 



A B

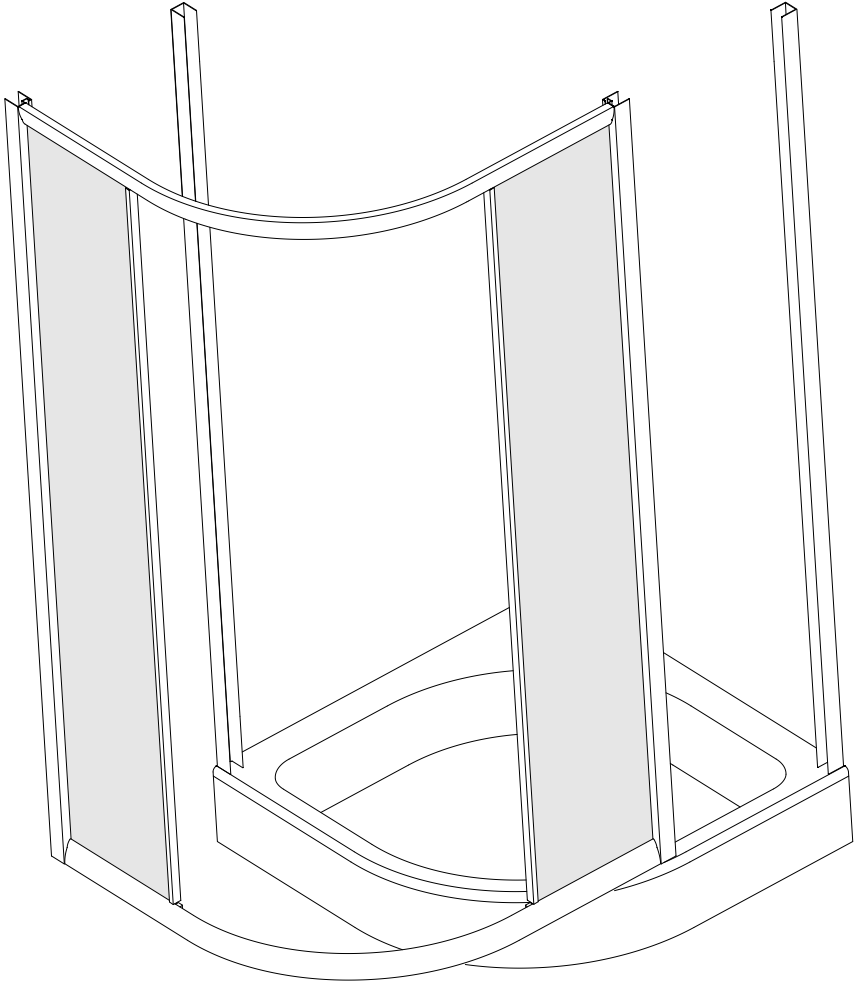 


A B

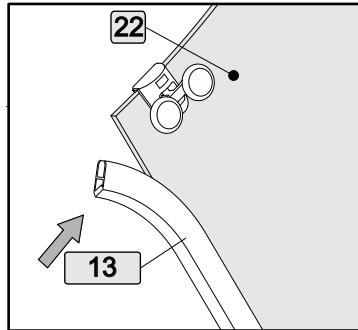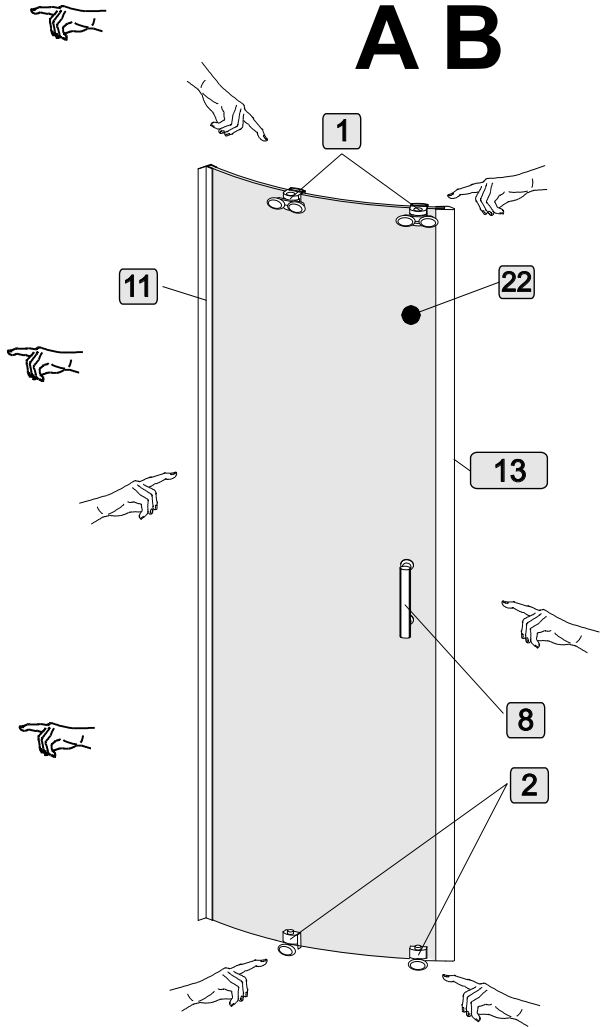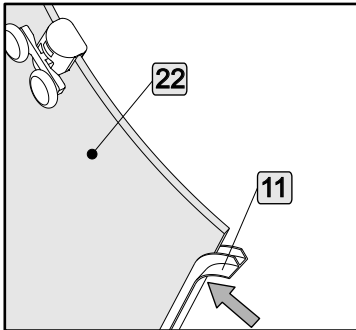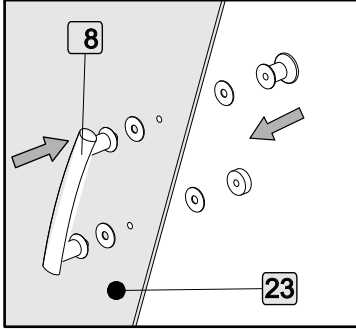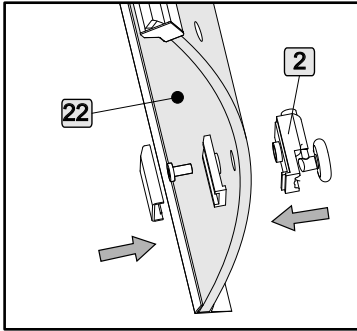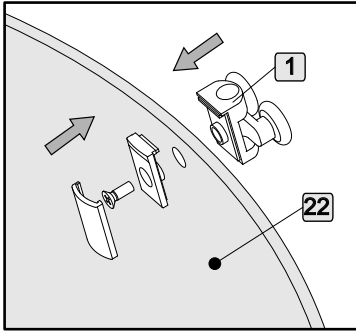      



A B

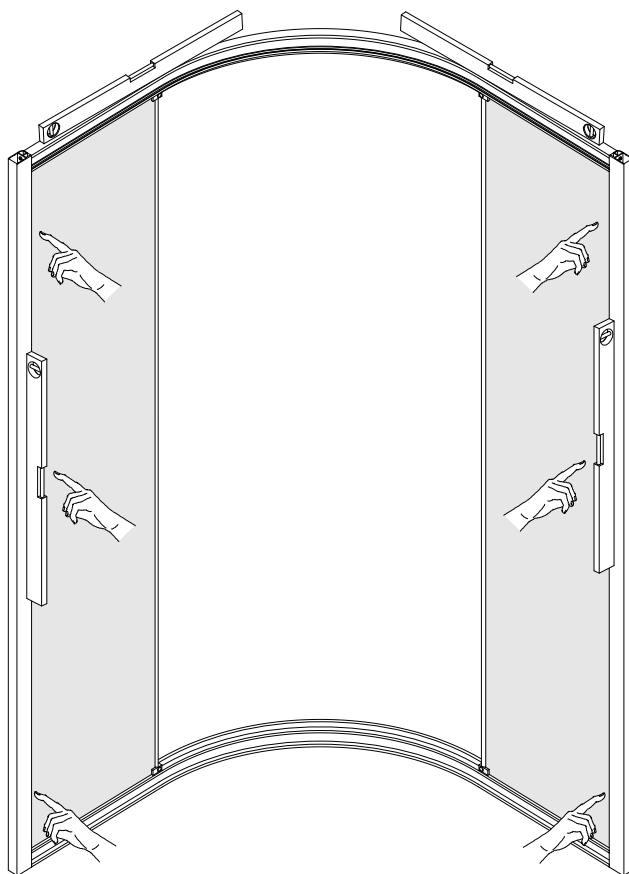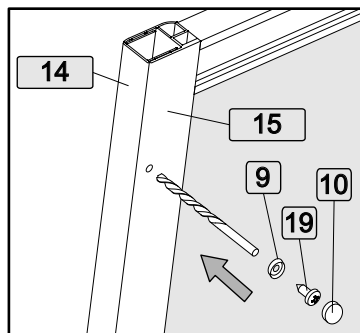  


A B

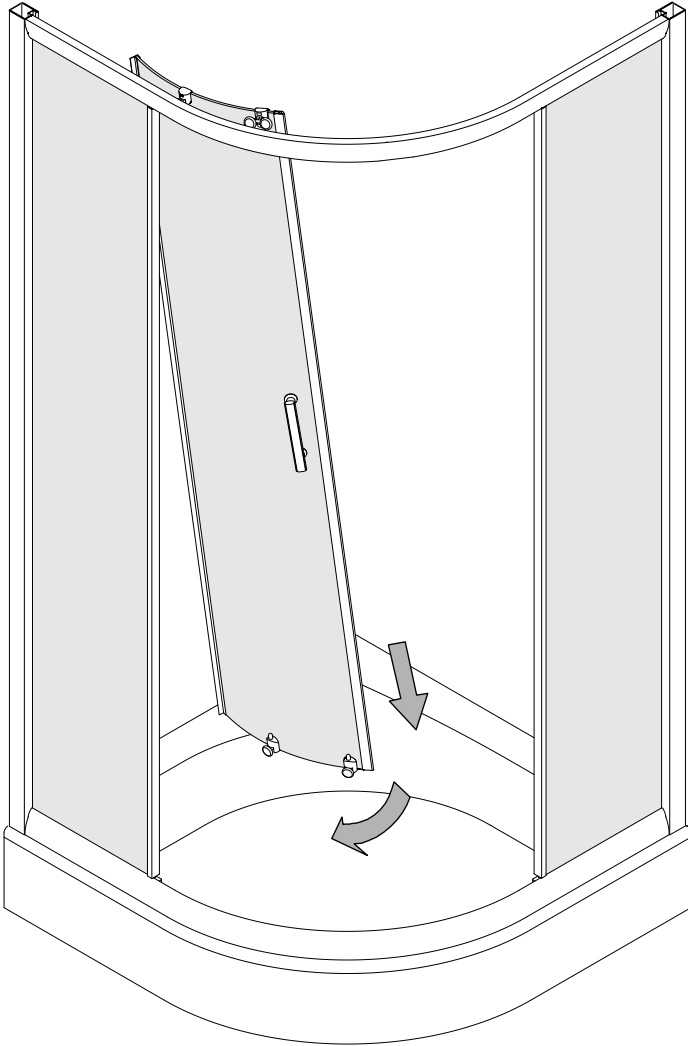 


A B

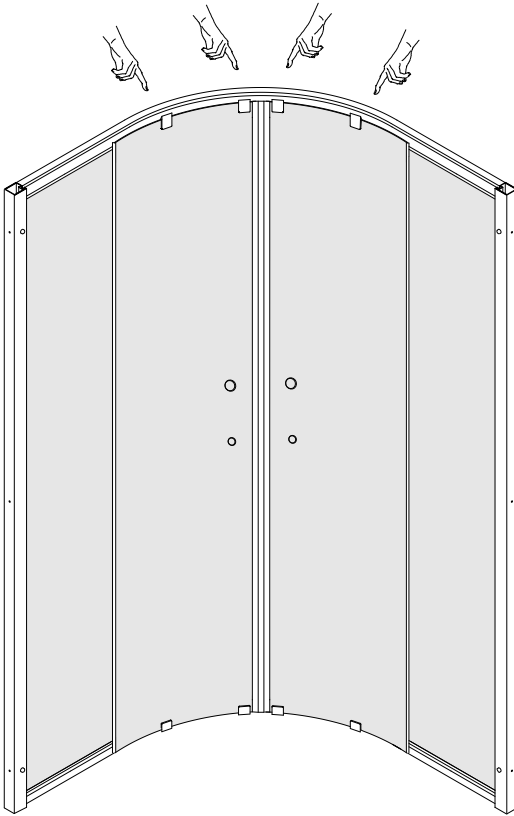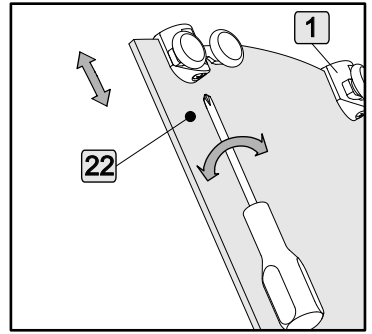  

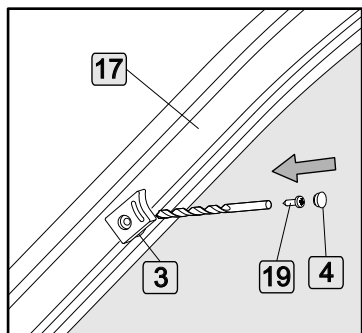 

A B

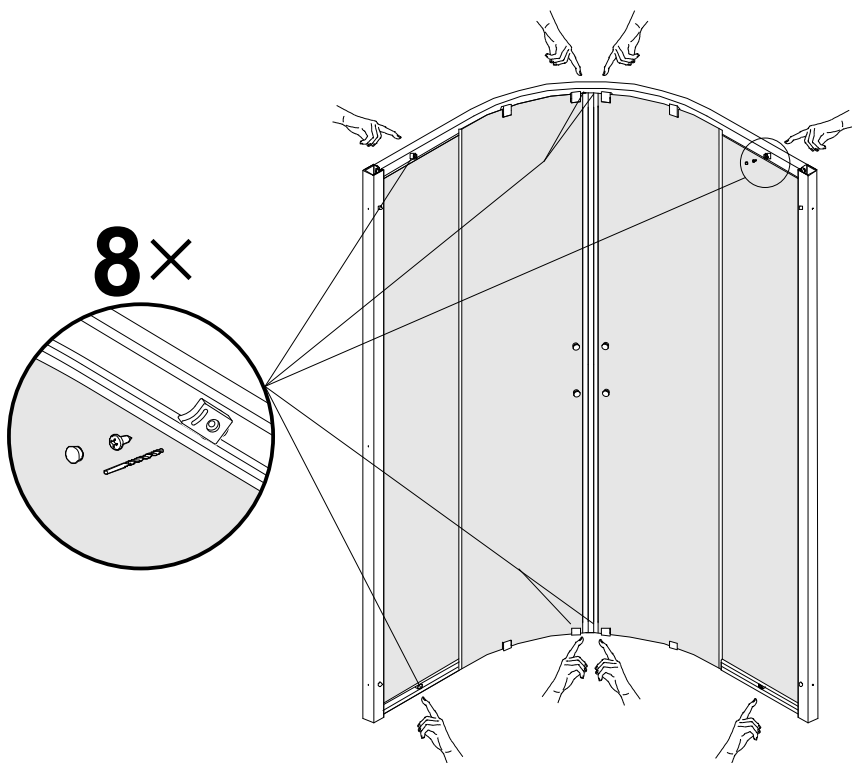 

A B

